


JET PLACEMENT

13" ZIPPER WAND, 10 FLOW

9502 Vee Jets

Set Straight

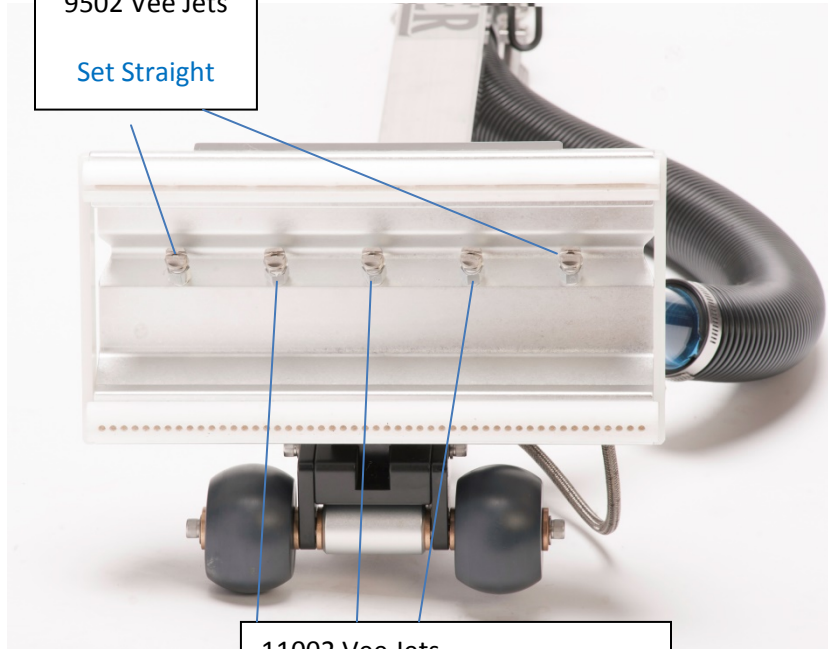

11002 Vee Jets

Slightly turn outward jets inward and place center jet straight, so the spray pattern does not collide.

Please call if you have any questions.

(734) 675-8440